verilux®
The Healthy Lighting Company™

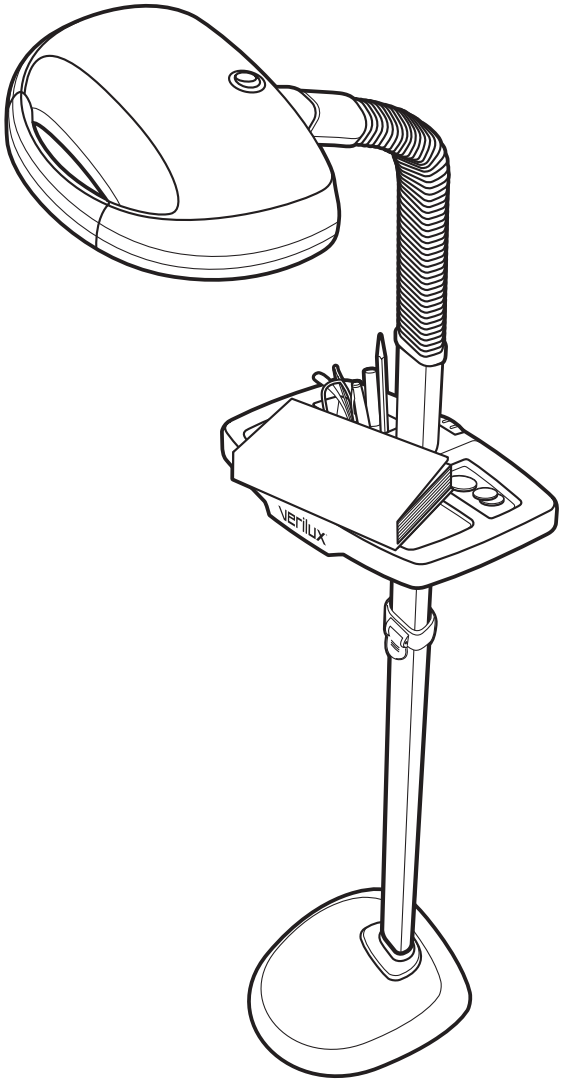

EasyFlex® | Deluxe

VF02

Natural Spectrum® Floor Lamp

verilux®
LIFE IN A BETTER LIGHT®

Dear Customer,

Thank you for purchasing the Verilux® EasyFlex® Natural Spectrum® Deluxe Floor Lamp. You have received an innovative and quality manufactured product, backed by a three-year limited warranty. As a Verilux® customer, your satisfaction means everything to us. We look forward to serving you now and in the future.

Many other healthy lighting products are available through our catalog and online. To request a free copy of our catalog, call our toll-free number 1-888-544-4865. You may also visit us on the web at www.Verilux.com to learn more about all our quality Verilux® products.

Have a Bright Day!

Nicholas Harmon
President and CEO

IMPORTANT SAFETY INSTRUCTIONS

CAUTION:

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT DISMANTLE. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY:

- Turn off/unplug and allow to cool before replacing bulb or cleaning.
- Do not operate the lamp in close proximity to flammable or combustible vapors, such as aerosol (spray) products or where oxygen is being administered.
- Use only the type of bulb and maximum wattage indicated by the manufacturer.
- Never cover the lamp when it is in operation.
- **Read these instructions** – before using this lamp.
- **Keep these instructions** – for future reference.
- Do not use this lamp in damp/humid or wet locations.
- For indoor use only.
- Clean only with dry cloth.
- Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. If the provided plug does not fit in your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where it exits from the lamp.
- Unplug this lamp during lightning storms or when unused for long periods of time.
- If the lamp has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen onto the lamp, the lamp has been exposed to rain or moisture, does not operate normally, or has been dropped, it should not be operated. There are no user serviceable parts within this lamp.

SAVE THESE INSTRUCTIONS

GENERAL PRECAUTIONS

- Do not use with power supply voltage other than 120V AC
- Avoid placing the lamp in areas that are dusty, humid/moist, lack ventilation, or are subject to constant vibration.
- Not for use with light dimmers, timers, motion detectors, voltage transformers, or extension cords.
- Do NOT use lubricating agent in bulb assembly.
- The light bulb may become loose during transit. To reinstall the light bulb, see the bulb installation instructions on page 9.
- Close supervision is recommended when this lamp is used by or near children, or others who may not understand the need for these precautions. Do not leave the lamp unattended during use.

This lamp has been tested and found to comply with Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This lamp generates, uses, and can radiate radio frequency energy and, if not used in accordance with the instructions, may cause interference to radio communications. If interference occurs try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the lamp and receiver.
- Connect the lamp into an outlet on a circuit different from that to which the receiver is connected.
- Move the lamp out of the line of sight of the remote control receiver.
- Consult the dealer or an experienced radio/TV technician for help.

GETTING STARTED

Main Parts & Controls

A. Ergonomic Handle
B. Lamp Head
C. High/Off/Low Switch
D. Gooseneck
E. Shaft
F. Ergonomic Height Adjustment Lever
G. Lamp Base
H. Power Cord
I. Ballast
J. LED Indicator
K. Bulb
L. Parabolic Light Diffuser

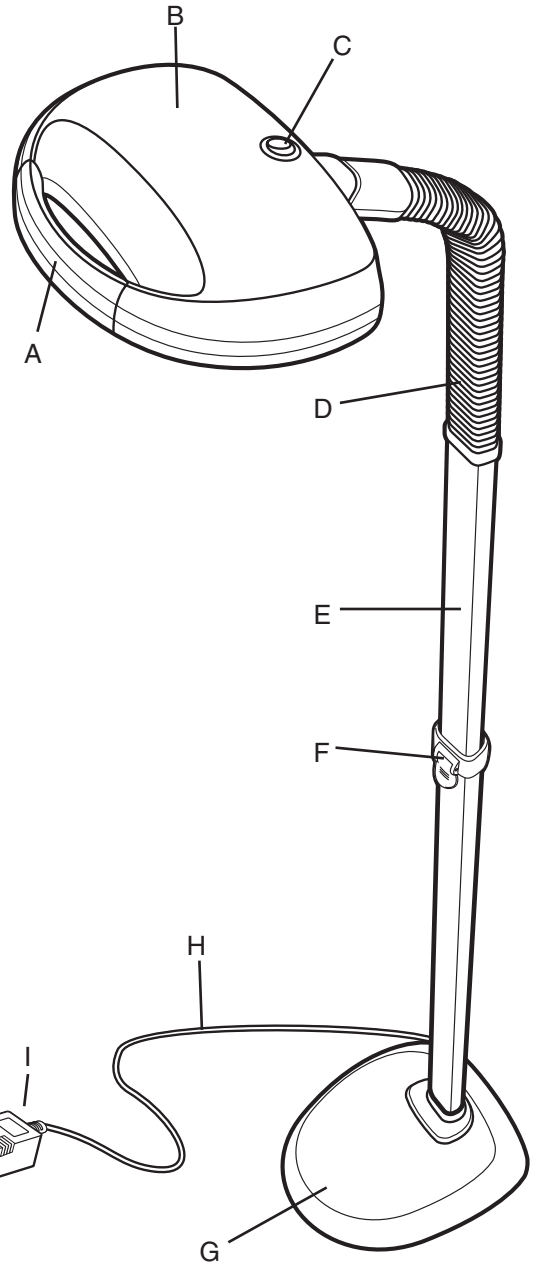

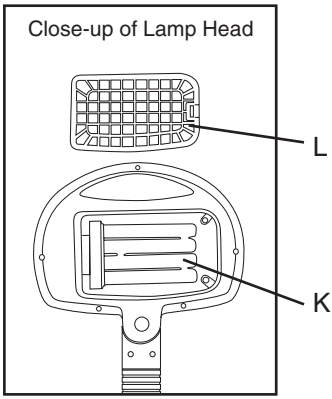

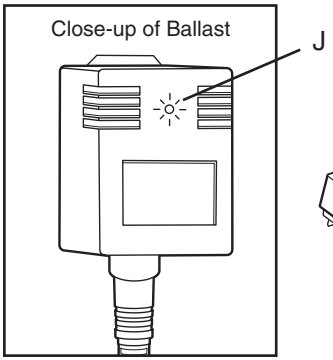

GETTING STARTED cont.

Please read instructions carefully before using the EasyFlex®

1. Unpack lamp carefully, removing all packaging material, and confirm you have all parts shown in the diagram. For your convenience the bulb has been pre-inserted into the socket.

2. Remove all pieces from box. Locate 2 screws and tightening tool, in plastic bag, and set aside.

3. Detach red plastic pieces and store them in the event you need to return the lamp.

4. The clear plastic sleeve on the shaft is specially designed to tear away easily. To avoid scratching the metal shaft, do not use a sharp object to cut the plastic.

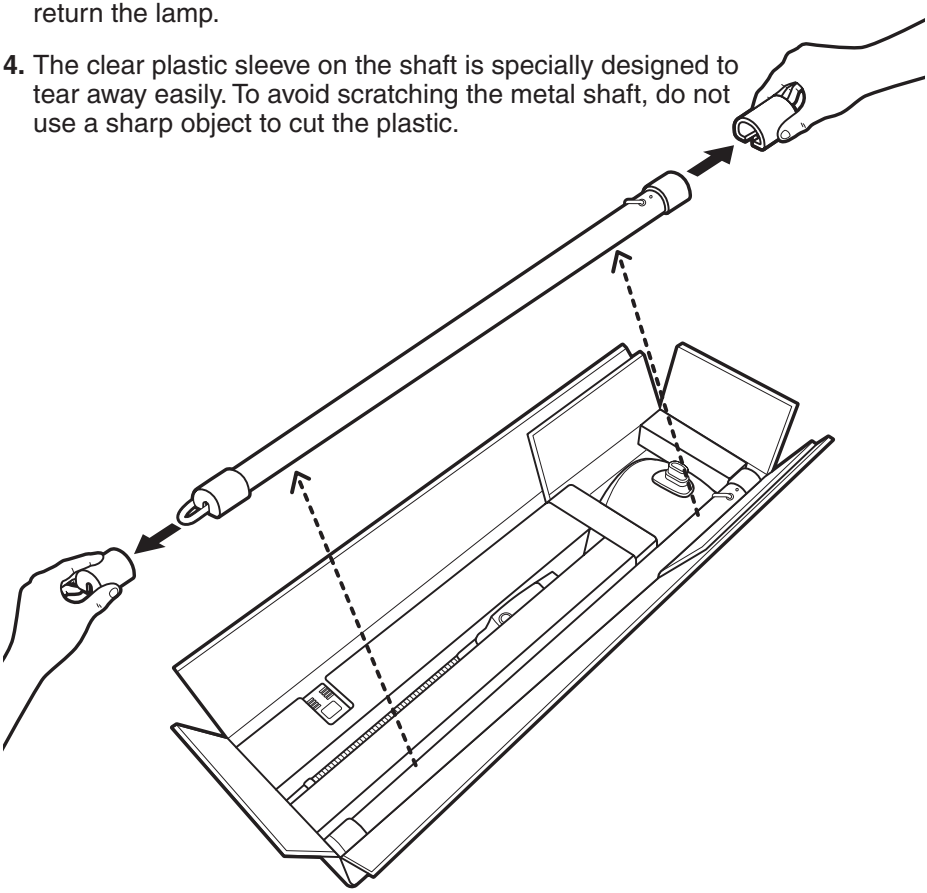

IMPORTANT NOTE: Remove red plastic protective pieces prior to assembly.

ASSEMBLY INSTRUCTIONS

1. Set lamp base on the floor and insert the lamp shaft over the base support unit until the screw holes line up as shown in Fig. 1. Insert the screw using the tightening tool and turn clockwise to tighten.

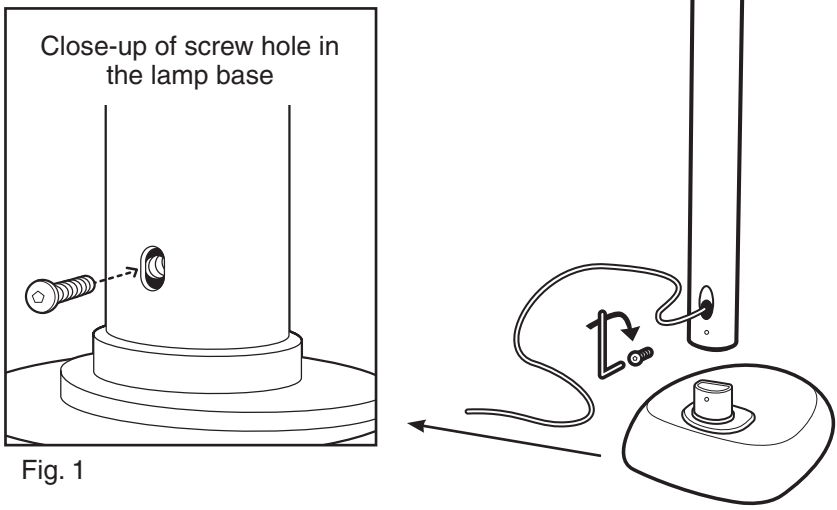

Fig. 1

2. Hold upper shaft with one hand, release ergonomic height adjustment lever by gently pulling it upward as shown in Fig. 2. Extend the upper shaft approximately 12”. Lock lever by gently pushing it downward. Once assembly instructions are complete, raise or lower upper shaft to desired height by releasing and locking the height adjustment lever.

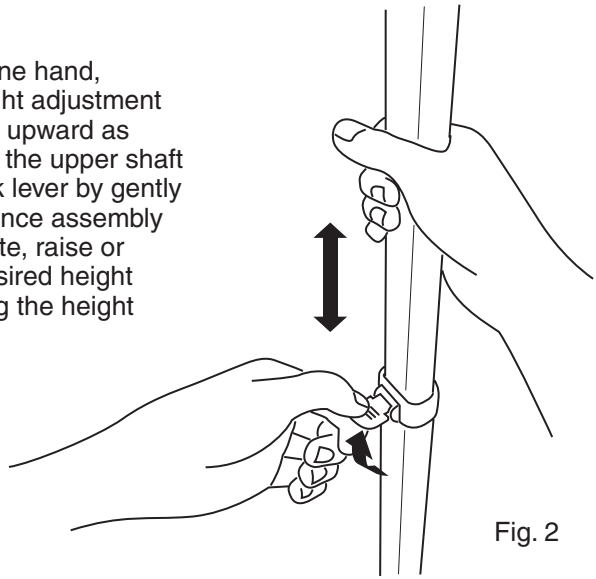

Fig. 2

ASSEMBLY INSTRUCTIONS cont.

3. Attach the lamp head gooseneck to the shaft until the screw holes line up as shown in Fig. 3. Use care when tucking the wire into the shaft. Form a loop with any excess wire prior to tucking it. Insert the screw using the tightening tool and turn clockwise to tighten.

Fig. 3

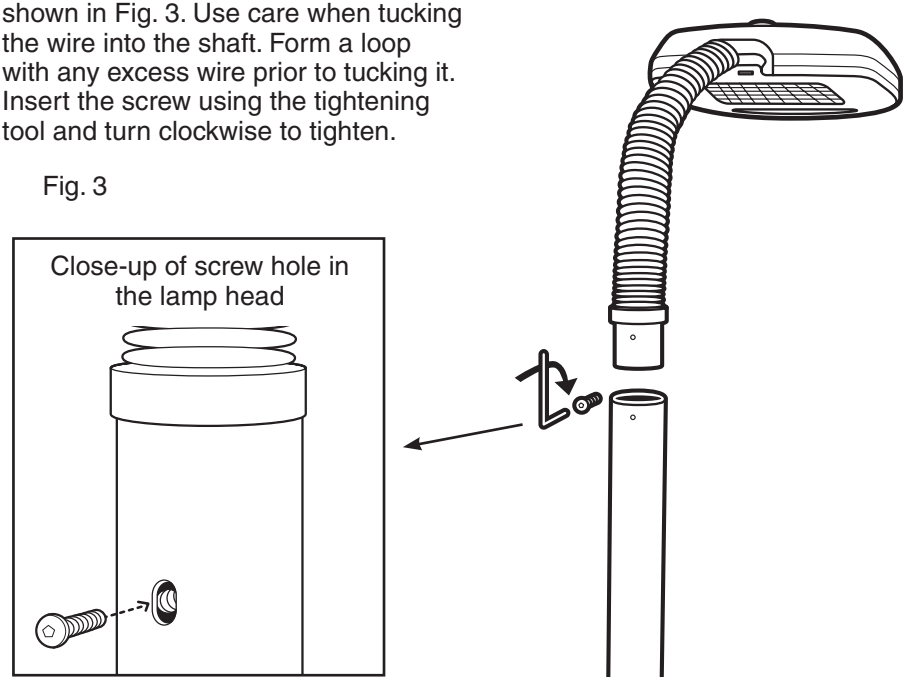

4. Remove the light diffuser from the protective plastic bag. Insert the plastic pegs at the bottom of the light diffuser into the openings near the bulb socket. Snap the tab into place as shown in Fig. 4.

Note: *Be sure all styrofoam packing is removed from bulb area prior to installing light diffuser.*

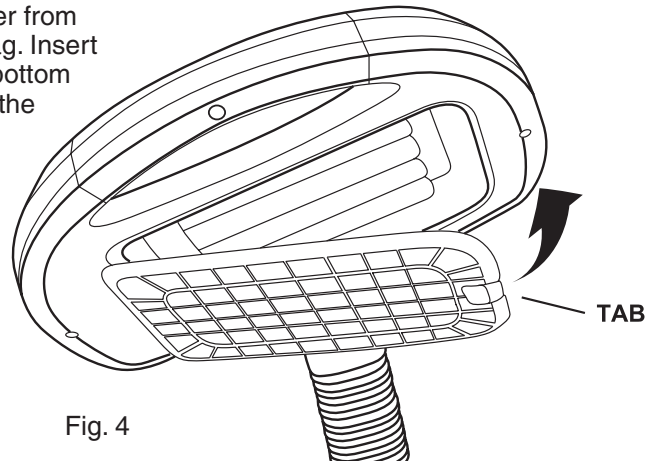

Fig. 4

ASSEMBLY INSTRUCTIONS cont.

5. Attach the ballast to the power cord. Use care to align the 4-pin plug properly. DO NOT FORCE - the power cord is designed to connect only one way.

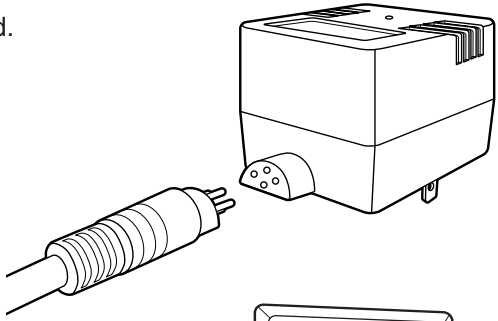

6. Plug ballast into a standard 120V 50/60Hz outlet. Turn lamp on. The green LED indicator (J) on center of the ballast will illuminate. If not, please refer to the troubleshooting section of this manual. (See page 10)

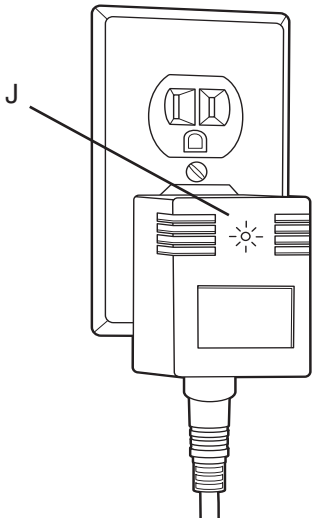

Note: *Green LED indicator will not illuminate if lamp is turned off or bulb is removed.*

WARNING: **Do not block vents on ballast.** Vents are necessary for proper function of the ballast; blocking them may cause overheating of the ballast and increase risk of fire.

ATTENTION!

ALWAYS lift your lamp by the shaft

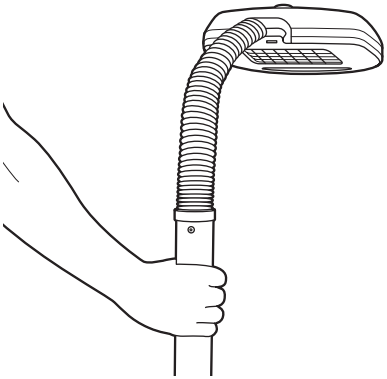

DO NOT lift the lamp by the gooseneck

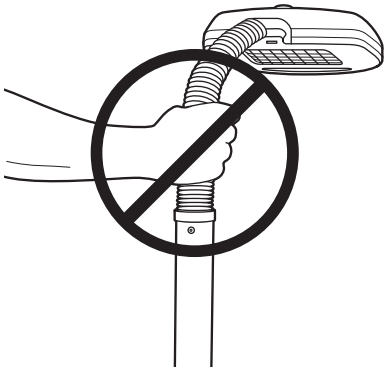

BULB REPLACEMENT

Removal

1. Unplug lamp from power source.

2. To access the bulb, remove grid diffuser by depressing the tab and lifting it out. (See Fig. 5 at right)

3. Firmly hold bulb base (B) and pull bulb (C) from the socket (A) in an outward motion. (See Fig. 6 below)

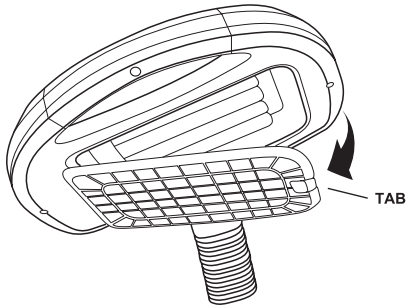

Fig. 5

Installation

1. Unplug lamp from power source.

2. Firmly hold base (B) and push bulb (C) into the socket (A).

3. Be sure bulb is firmly seated in the socket (see Fig. 7 below) and snapped into the metal bulb clip (D).

4. Replace grid diffuser.

Attention: *Do not grip bulb by the glass tubes. Only touch the base when removing or inserting bulb.*

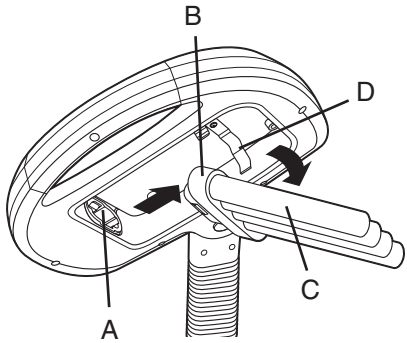

Fig. 6

Correctly seated bulb

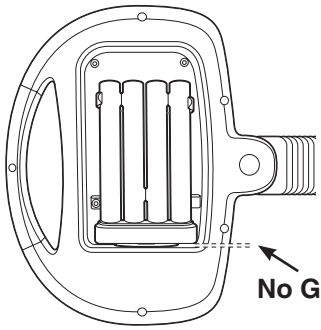

Incorrectly seated bulb

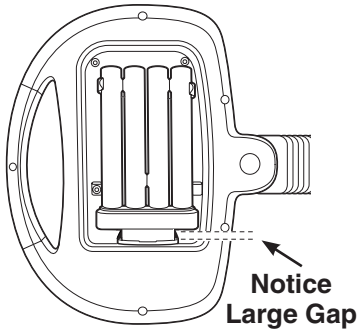

Fig. 7

TROUBLESHOOTING

Before requesting service on your Verilux® lamp please read the following:

- Make sure all power connectors, cords, and plugs are inserted fully and securely.
- Make sure there is power to the wall outlet or try another outlet – not connected to a dimmer.

PROBLEM	CHECK	SOLUTION
Light won't come on	Has the plug come loose?	Insert plug securely into wall outlet.
	Is the bulb old?	Check the bulb for blackening/darkening at the ends (an indicator of bulb life) and replace bulb. See www.VeriluxStore.com.
	Is the bulb connected securely to the socket?	Be sure the bulb is securely seated into the socket, repeat the bulb installation process.
Blackening/darkening at ends of bulb	Is the bulb new?	Sometimes when a new bulb is turned on for the first time the ends will darken, but this will fade after a few minutes.
	Is the bulb old?	With older bulbs darkening of the ends indicates end of bulb life. (This doesn't affect operation except to reduce the amount of light available since the phosphor in that area has become inactive). Bulb replacement is recommended.
Light flickers	Has the plug come loose?	Insert plug securely into wall outlet.
	Is the bulb connected securely to the socket?	Be sure the bulb is securely seated into the socket, repeat the bulb installation process.
	Is the lamp connected to a dimmer switch?	Connect lamp plug only to wall outlet without a dimmer switch.

CARE & CLEANING

Your Verilux® lamp is made from high quality materials that will last for many years with a minimum of care.

Clean only with a soft dry cloth – **DO NOT USE SOLVENTS OR CLEANERS CONTAINING ABRASIVES OR AMMONIA**

WARNING: To prevent risk of shock or personal injury when cleaning lamp, make sure you have turned off and unplugged the lamp, and allow sufficient time for the bulb to cool.

Three-Year Limited Warranty

ATTENTION! ONCE OPENED, PLEASE ***DO NOT*** RETURN THIS PRODUCT TO THE STORE WHERE IT WAS PURCHASED FOR REPAIR OR REPLACEMENT!

Many questions may be answered by visiting www.Verilux.com, or you may call our customer service department at 1-888-544-4865

This limited warranty is provided by:
Verilux, Inc., 340 Mad River Park, Waitsfield, VT 05673

Verilux® warrants this product to be free from defects in material and workmanship for a period of three years from the date of the original retail purchase. During the limited warranty period, Verilux, Inc. will, at its option, repair or replace defective parts of this product, at no charge to the customer, subject to the following limitations. This limited warranty does not include any postage, freight, insurance or delivery fees. This warranty does not cover damage, defect or failure caused by or resulting from accident, external destruction, alteration, modification, abuse, misuse, or misapplication of this product.

If, during the first three years of ownership, this product fails to operate properly, it should be returned as specified below:

Please pack the defective product in its original protective packing and box, with a copy of your sales receipt, along with $6.95 (check or money order to cover shipping and handling), and send to:

For U.S. Postal Service Only:	**For Fed Ex & UPS Only:**
Verilux Warranty	**Verilux Warranty**
Service Center, c/o WTB	**Service Center, c/o WTB**
P.O. Box 119, West Redding, CT 06896	32 Henry Street, Bldg 17A, Bethel, CT 06801

Please allow 4-6 weeks before you receive the repaired or replaced product.

ATTENTION: When returning a product, be aware that damage during shipping is the responsibility of the purchaser and will void any warranty claim. We recommend that you insure the shipment by shipper when returning this product or any parts. Be sure to return product in original packaging.

Note: *Verilux® recommends using a quality surge suppressor on all electronics equipment. Voltage variations and spikes can damage electronic components in any system. A quality suppressor can eliminate the vast majority of failures attributed to surges and may be purchased at electronics stores.*

Due to ongoing improvements, actual product may have slight variations from the product described in this manual.

Please visit our web site at: www.Verilux.com

verilux®
LIFE IN A BETTER LIGHT®

340 Mad River Park, Waitsfield, VT 05673

VF02-MAN-Rev3

Printed in China for Verilux, Inc.
© Copyright 2007 Verilux, Inc. All rights reserved.